

# EASY ASSEMBLY AND OPERATION INSTRUCTIONS

MR-124283 Rocking Moldy Mommy



**Please follow the step by step guide and enjoy your Rocking Moldy Mommy!**

## CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.

## WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep all away from the adapter, as it heats up during operation.


Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

## PARTS LIST

- A. Base/Frame x 1
  - B. Step Here Pad x 1
  - C. Head Shoulder Frame x 1
  - D. Costume x 1
  - E. Baby Support Cradle x 1
  - F. Right Arm with Hand x 1
  - G. Left Arm with Hand x 1
  - H. Right Leg with Shoe x 1
  - I. Left Leg with Shoe x 1
  - J. Baby x 1
  - K. Blanket x 1
  - L. Shawl x 1
  - M. Adapter (Included) x 1
- Input: 100 - 240VAC 50/60Hz  
Output: 5.9V 3.0A




**BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, PLEASE CONTACT CUSTOMER SERVICE AT SUPPORT@MORRISCOSTUMES.COM, OR BY PHONE 704-332-3304. IN YOUR EMAIL INQUIRY, PLEASE INCLUDE: YOUR ORDER NUMBER, WHO YOU BOUGHT IT FROM, AND WHAT SPECIFICALLY IS WRONG. THANK YOU.**

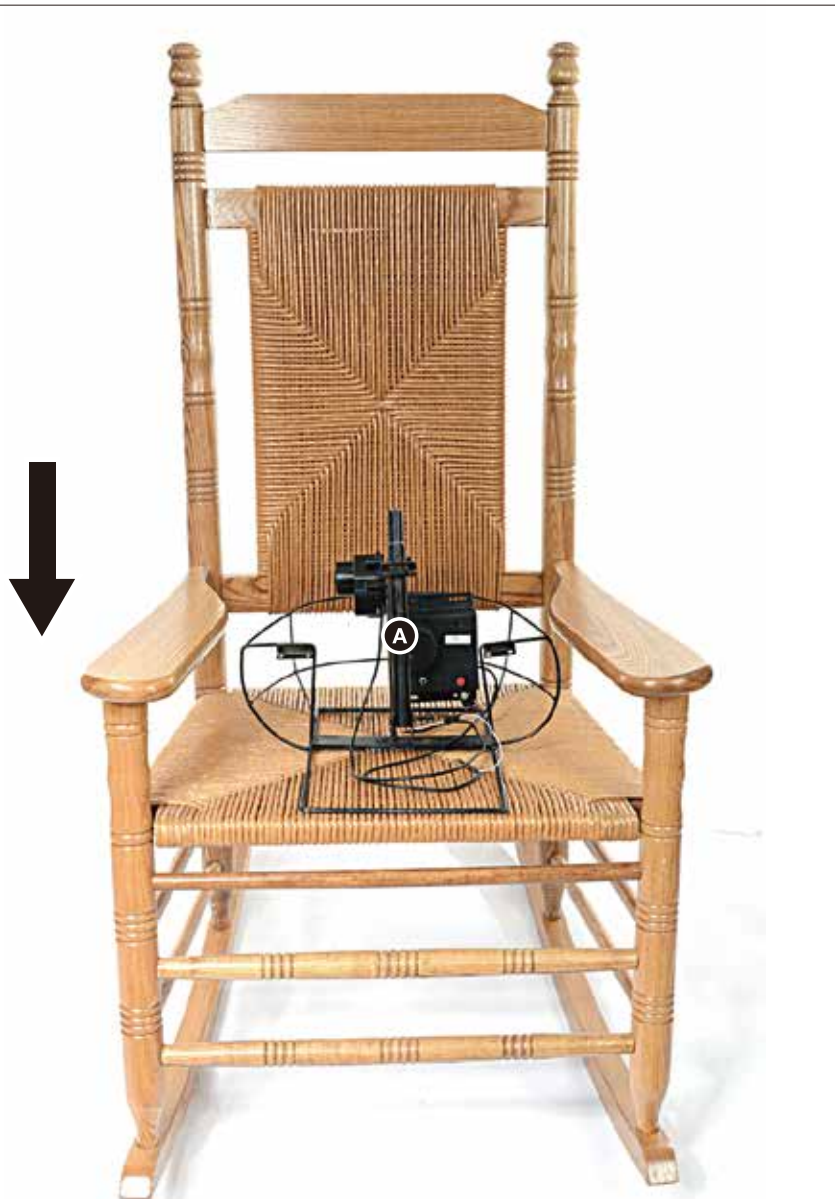

### STEP 1

Note The longer end of the (A) Base/Frame goes towards the front. First place (A) base/Frame in any chair. Note: Using a rocking chair will give the best effect.

(Chair is not included)

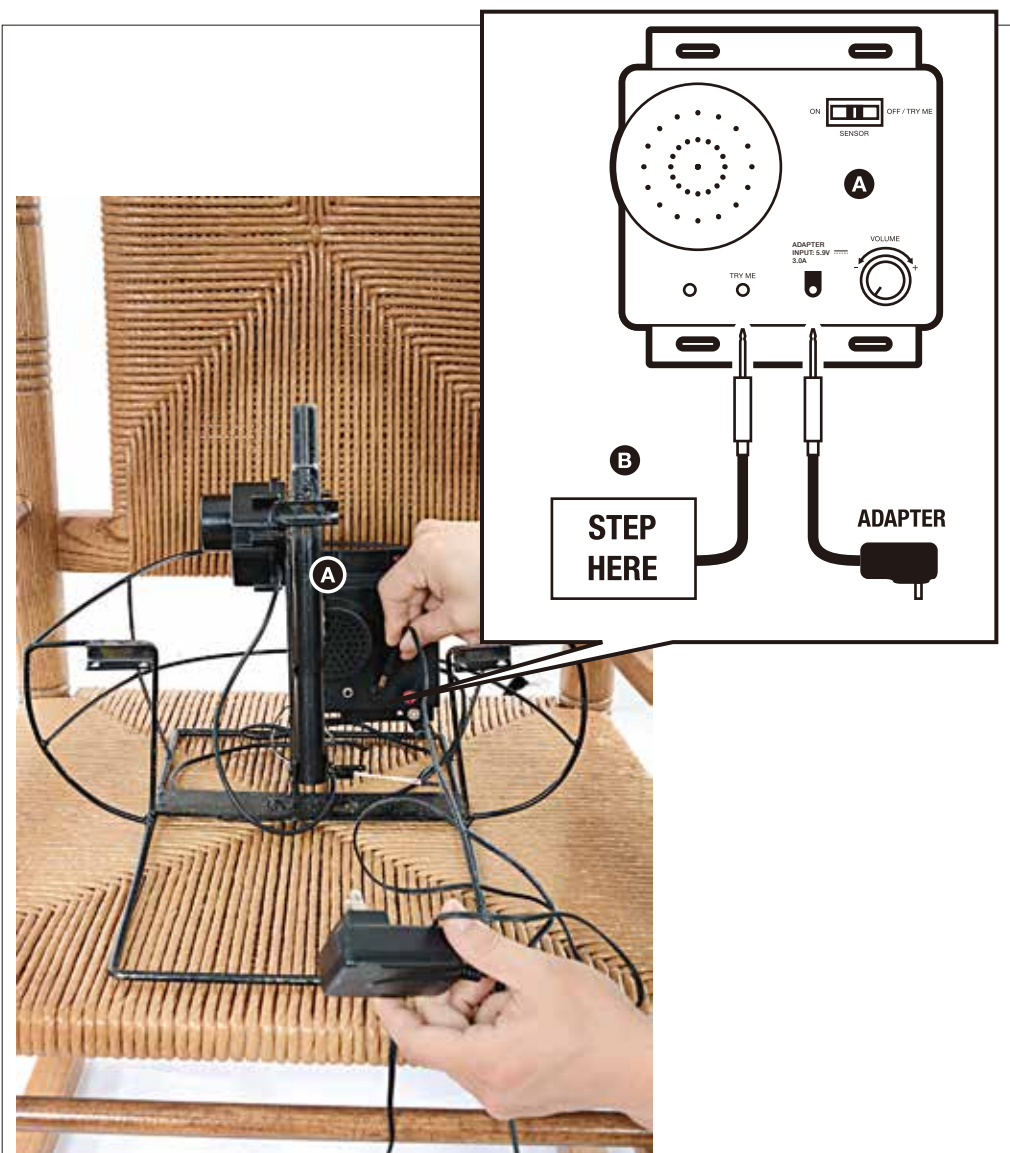


### STEP 2

Now, plug in the Power Adapter into the input receiving jack "DC 6V" on the Function Control Box.

Note: Do not plug Power Adapter into power outlet until item assembly is completed.

Optional: If you choose to use (B) Step Here Try-Me Activation Pad, plug the connector into the input receiving jack marked "TRY ME" on the Function Control Box and set the Step Here pad in front of the character when ready to display.




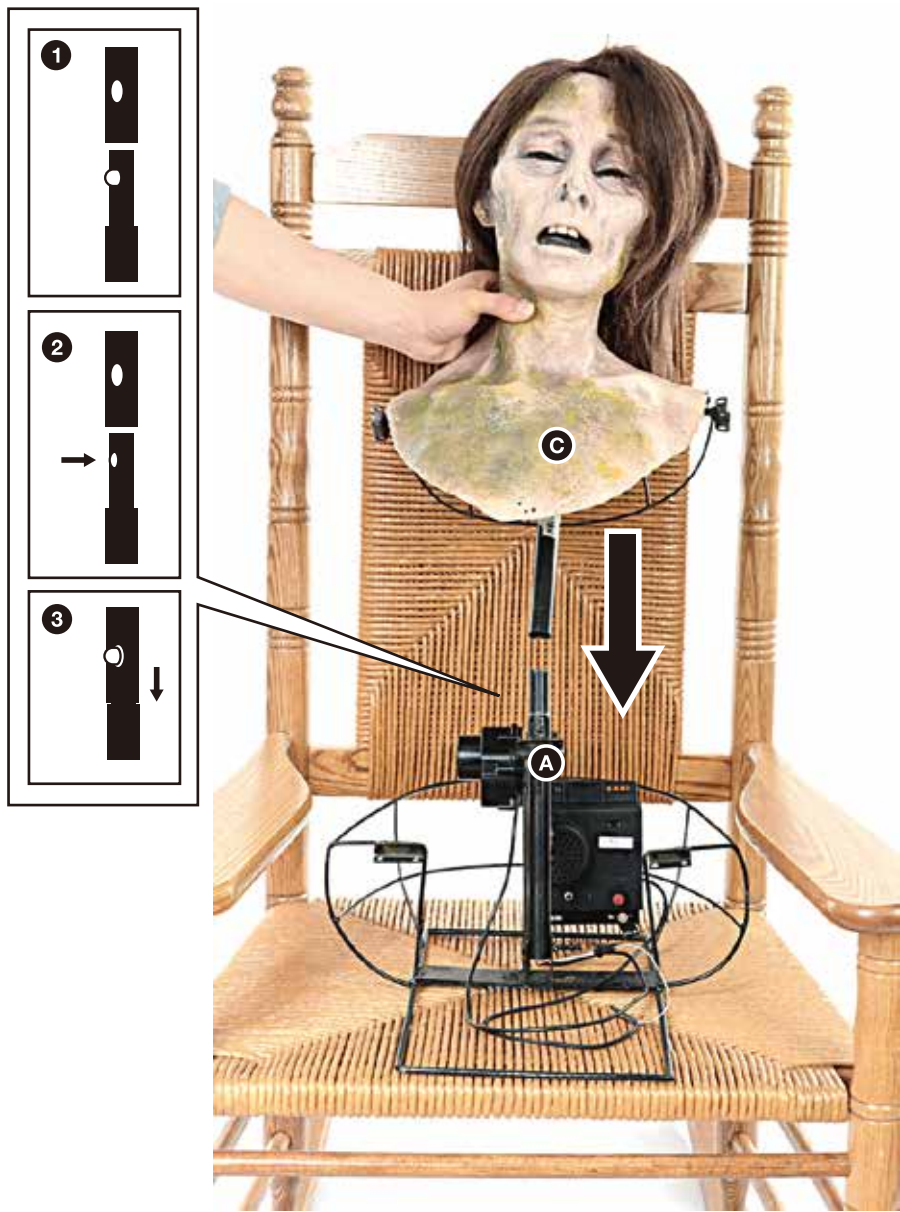


**STEP 3**  
Place the (C) Head Shoulder Frame onto the support pole of the (A) Base/Frame as shown and secure by aligning the quick-connect push button into the pre-drilled hole.



**STEP 4**  
Lower the (D) Costume over the (C) Head and (A) Base/Frame and pull the dress forward between the chair and the (A) Base/ Frame so the mechanism is inside the costume.

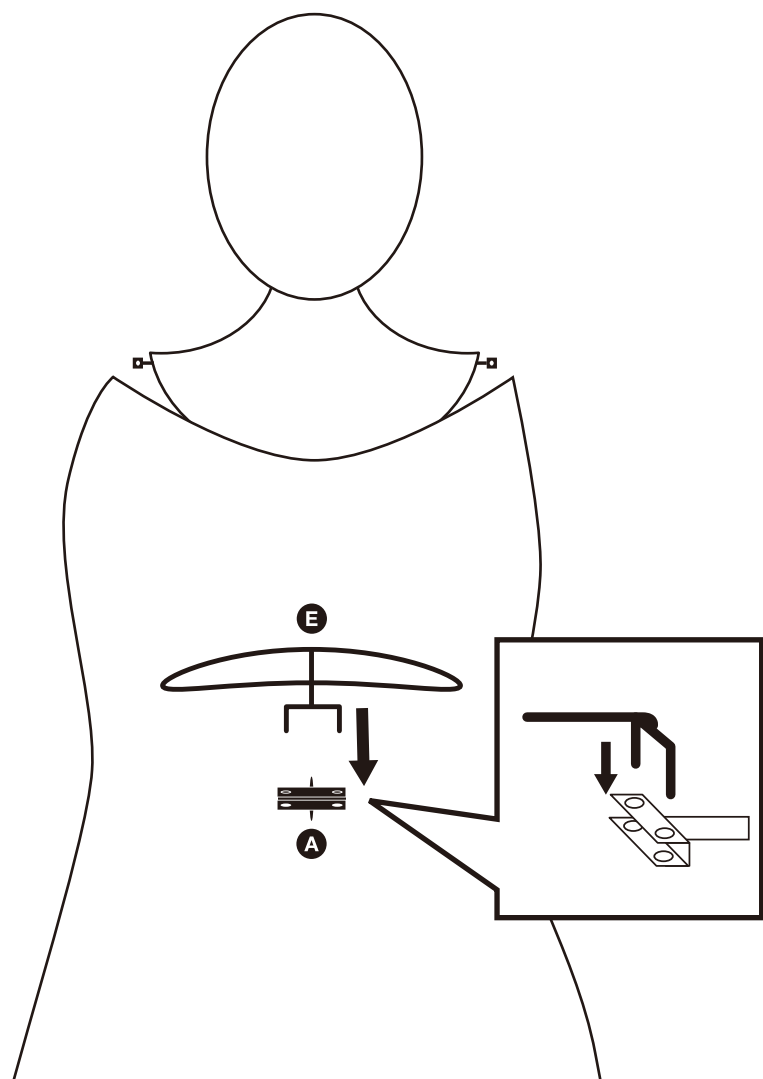


**STEP 5**  
Place (E) Baby Support Cradle by sliding the Forked-Hook Into the front of the (A) Base/Frame's slot housing. Note: there is a pre cut hole for this in the front of the Costume.

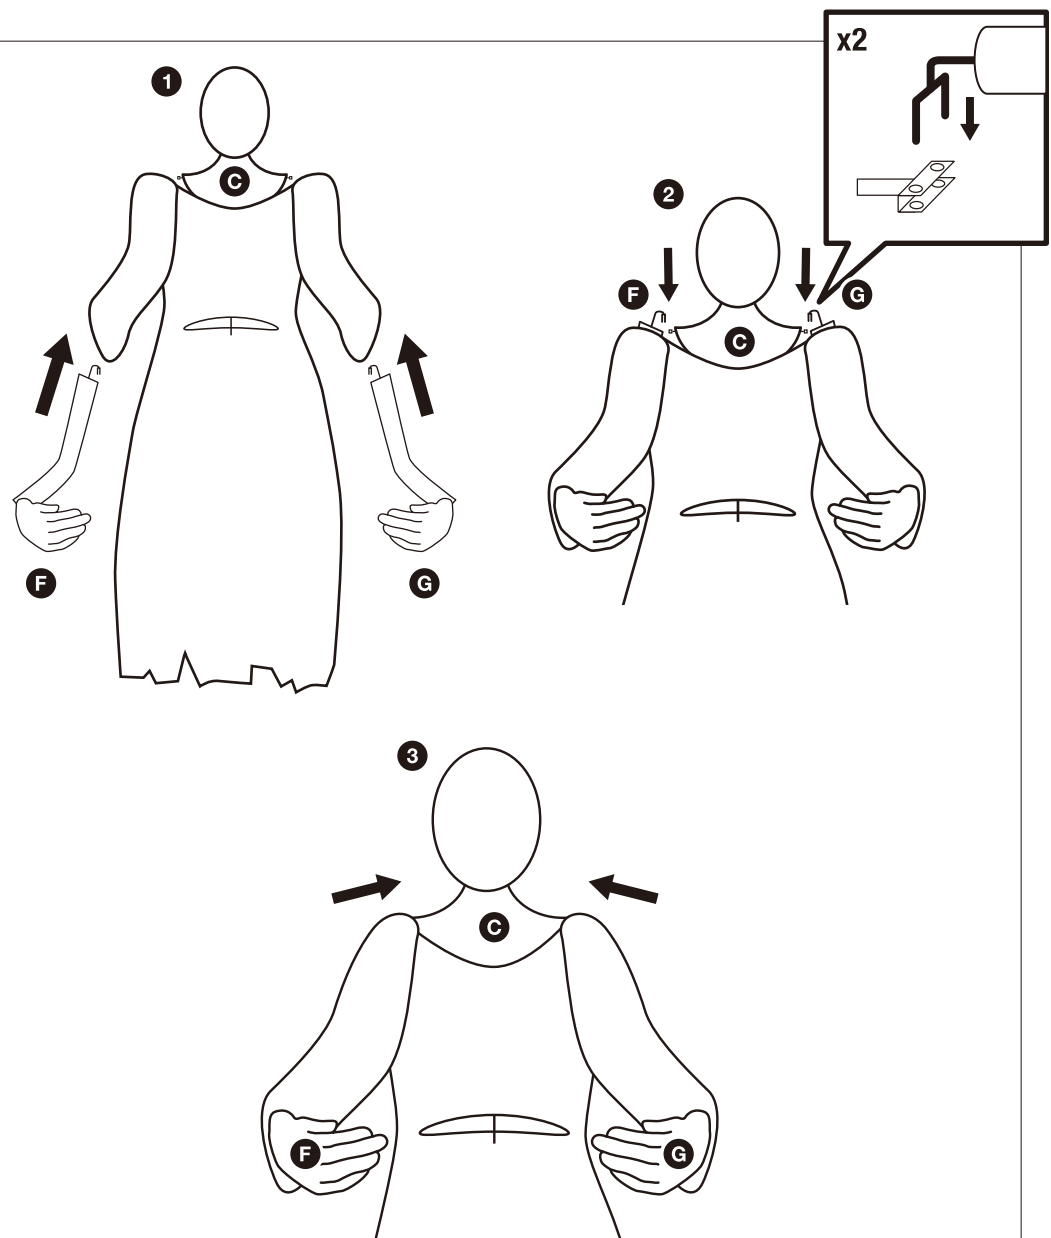


**STEP 6**  
Slide the (F) Right Arm up through the right sleeve and slide the forked-hook into the Right "shoulder" slot on the (C) Head Shoulder Frame. Slide the (G) Left Arm up through the left sleeve and slide the forked-hook into the left "shoulder" slot on the (C) Head Shoulder Frame.



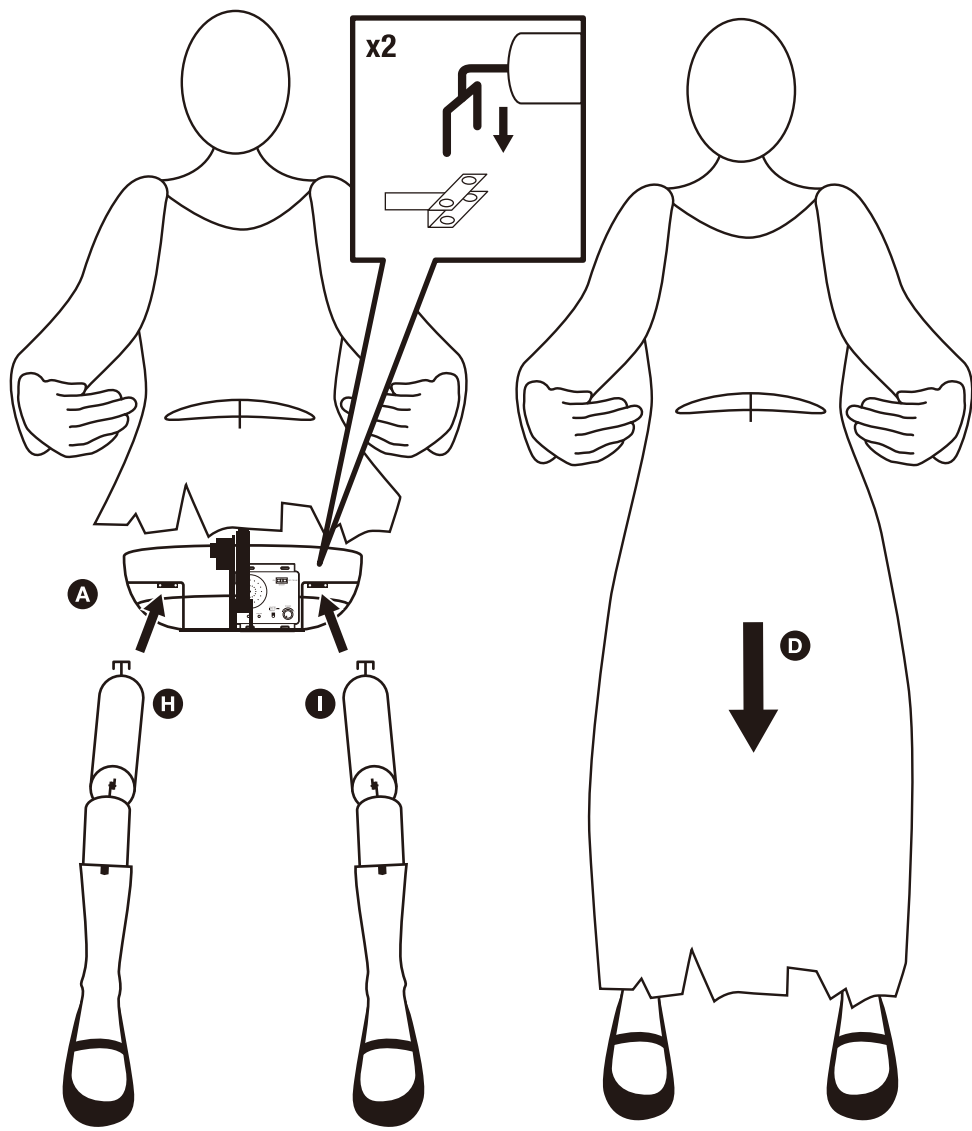

#### STEP 8

Slide the (H) Right Leg up through the bottom of the costume and slide the forked-hook into right slot on the (A) Base/Frame. Slide the (I) Left Leg up through the bottom of the costume and slide the forked-hook into left slot on the (A) Base/Frame. Pull (D) Costume down over the legs.

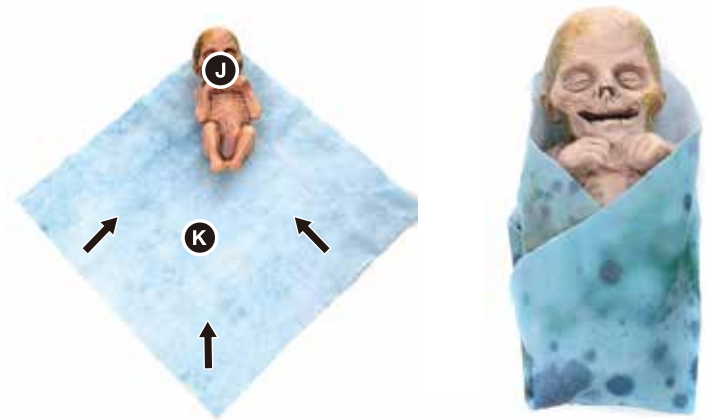

#### STEP 7

Wrap (J) Baby in (K) blanket and place with the head to the left on the (E) Baby Support Cradle.



#### STEP 8

Place (L) Shawl over her shoulders to complete the look.



#### OPERATION INSTRUCTIONS:

1. Plug the Power Adapter into a standard power outlet and adjust the settings on the Function Control Box to your liking.
2. Moldy Mommy has 3 operation settings which can be found on the main Function Control Box on the (A) Base/Frame:
  - Continuous rocking with sounds.
  - Continuous rocking with sensor pad-activated sounds.
  - Sensor pad-activated rocking and sounds.
3. The Function Control Box also includes a Volume control knob, which allows you to adjust the volume to be as loud or as quiet as needed. Be sure to test the item before finalizing your display so you can set the volume to your liking.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.