

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

MR-124917 Jack Stalker Animated Prop



Please follow the step by step guide and enjoy your Jack Stalker Animated Prop!

WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep all away from the adapter, as it heats up during operation.

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.

Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

PARTS LIST

- A. Base x 1
- B1. Right Lower Support Pole x 1
- B2. Left Lower Support Pole x 1
- C. Upper Support Poles x 2
- D. Foam Tubes x 2
- E. Costume x 1
- F. Lower Torso Frame x 1
- G. Hip Hoop x 1
- H. Spinal Pole x 1
- I. Upper Torso Frame x 1
- J. Back Frame x 1
- K. Right Arm x 1
- L. Left Arm x 1
- M. Right Hand with Pumpkin x 1
- N. Left Hand x 1
- O. Head x 1
- P. Chest x 1
- Q. Gauze x 2
- R. Step Pad x 1
- S. Universal Adapter (Included) x 1

Input: 100 - 240VAC 50/60Hz
Output: 5.9V 3.0A

BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, PLEASE CONTACT CUSTOMER SERVICE AT SUPPORT@MORRISCOSTUMES.COM, OR BY PHONE 704-332-3304. IN YOUR EMAIL INQUIRY, PLEASE INCLUDE: YOUR ORDER NUMBER, WHO YOU BOUGHT IT FROM, AND WHAT SPECIFICALLY IS WRONG. THANK YOU.

STEP 1

Note: Throughout the instructions, right and left are relative to the character.

Attach the (B1) & (B2) Lower Support Poles to the (A) Base as shown and secure by aligning the quick connect push buttons into the pre-drilled holes as shown in Figure 1.

Attach the (C) Upper Support Poles to the (B1) & (B2) Lower Support Poles and secure by aligning the quick connect push buttons into the pre-drilled holes as shown in Figure 2.

STEP 2

Lower the (D) Foam Tubes over the assembled (B1)/(B2) & (C) Support Poles as shown in Figure 1.

Lower the (E) Costume over the assembled (D) Foam Tubes as shown in Figure 2.

NOTE: The speaker on the Function Control Box located on the (G) Lower Torso Frame should be facing front.

Attach the (F) Lower Torso Frame to the (C) Upper Support Poles and secure by aligning the quick connect push buttons into the pre-drilled holes as shown in Figure 3.


Now, plug the Adapter into the input receiving jack marked "DC 5.9V" on the Function Control as shown in Figure 4.

STEP 3

STEP 4

OPTIONAL: If you choose to use the Step Here Try-Me Activation Pad, plug the connector into the input receiving jack marked "TRY ME" on the Function Control box and route the Step Here Pad down and out the bottom, then set the Step Here Pad in front of the character.

Note: Do not plug the Adapter into power outlet until item assembly is completed.

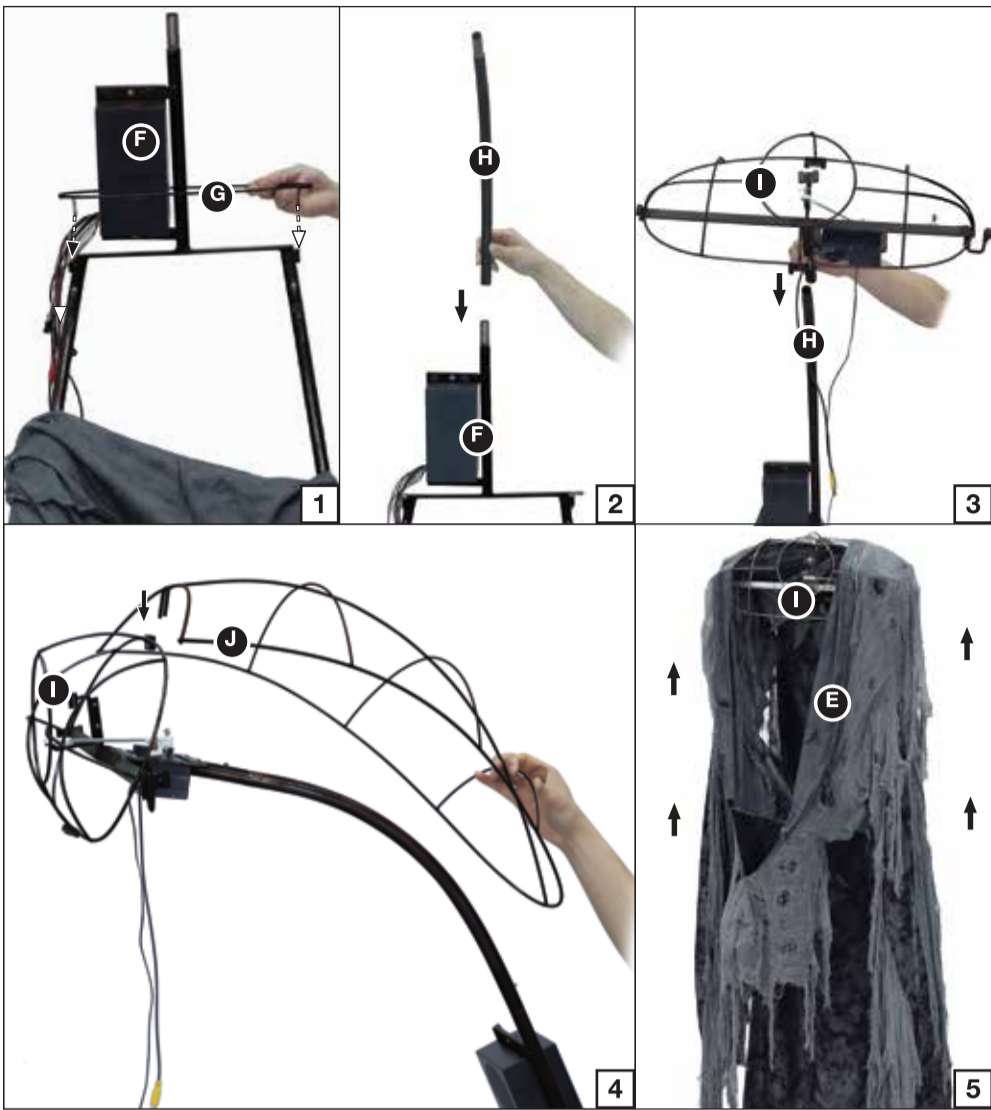

STEP 3

Lower the (G) Hip Hoop down over the (F) Lower Torso Frame and slide it through the slots located on the (F) Lower Torso Frame as shown in Figure 1.
 Assemble the (H) Spinal Pole onto the (F) Lower Torso Frame and secure by aligning the quick connect push button into the pre-drilled hole as shown in Figure 2.
 Assemble the (I) Upper Torso Frame onto the (H) Spinal Pole and secure by aligning the quick connect push button into the pre-drilled hole as shown in Figure 3.
 Attach the (J) Back Frame onto the (I) Upper Torso Frame by sliding the forked hook into the slot housing at the back of the (I) Upper Torso Frame as shown in Figure 4.
 Pull the (E) Costume up over the (I) Upper Torso Frame and the (J) Back Frame as shown in Figure 5.



STEP 4

Slide the (K) Right Arm up through the right sleeve and slide the forked hook into the right "shoulder" slot housing on the (E) Upper Torso Frame as shown in Figures 1 & 2.
 Slide the forked hook of the (M) Right Hand with Pumpkin into the slot located on the (K) Right Arm then connect the cable from the (K) Right Arm to the (M) Right Hand with Pumpkin as shown in Figure 3.



STEP 5

Secure the hook & loop closures at the wrist as shown in Figure 1.
 Slide the (L) Left Arm up through the left sleeve and slide the forked hook into the left "shoulder" slot housing on the (I) Upper Torso as shown in Figures 2 & 3.
 Slide the forked hook of the (N) Left Hand into the slot located on the (L) Left Arm then secure the hook & loop closures at the wrist as shown in Figure 4.



STEP 6

Put the (O) Head through the (E) Costume then set the (O) Head onto the (I) Upper Torso Frame by sliding the forked hook into the "neck" slot housing on the (I) Upper Torso Frame as shown in Figure 1 & 2.
 Secure the (E) Costume to the (O) Head by using the available hook & loop closures as shown in Figure 3.
 Attach the (P) Chest onto the (I) Upper Torso Frame by sliding the forked hook into the slot housing on the (I) Upper Torso Frame as shown in Figure 4.



STEP 7

Connect the cables from the (I) Upper Torso Frame and the (M) Right Hand with Pumpkin and the (P) Chest to the corresponding cables on the (F) Lower Torso Frame as shown in Figure 1. Secure the (E) Costume to the (P) Chest with the hook & loop closures as shown in Figure 2. Secure the back of the (E) Costume with the hook & loop closures as shown in Figure 3. Place both strands of the (Q) Gauze onto the (M) Right Hand with Pumpkin and style it to your preference as shown in Figure 4.



STEP 8

Your Jack Stalker Animated Prop is now fully assembled. Plug in and turn on to let the fun begin!

OPERATION INSTRUCTIONS:

1. Plug the Adapter into a standard power outlet and adjust the settings on the Function Control Box as desired.

2. Settings:

Sensor: This switch mode will activate lights, sound, and animation when the Infra-red (IR) sensor is activated and will operate for 1 audio-cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.

○/OFF/Try Me: This switch mode allows the item to be activated only if triggered by using a Step Here Try Me Activation Pad. The item will operate for one audio cycle with each Try Me activation. Refer to Assembly Instructions Step 2 for further details.

I / ON : This switch mode will continuously operate the lights, sound, and animation of the item.

 **+** : Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

